




How to Determine the Slope of Your Site



At the building pad area, check the height difference over a 10 foot length.



If there is LESS than 1 foot height change over a span of 10 feet, then your grade is less than 1:10 and therefore “flat”

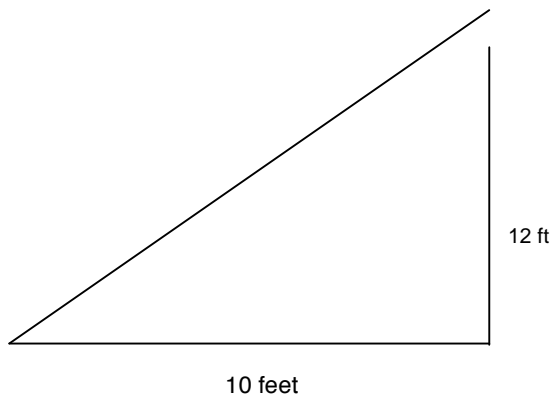

If there is MORE than 1 foot height change over a span of 10 feet, your grade change is considered greater than 1:10 and considered “sloped”